


### Generation 1 Two-way Switching (With Intermediate Point)

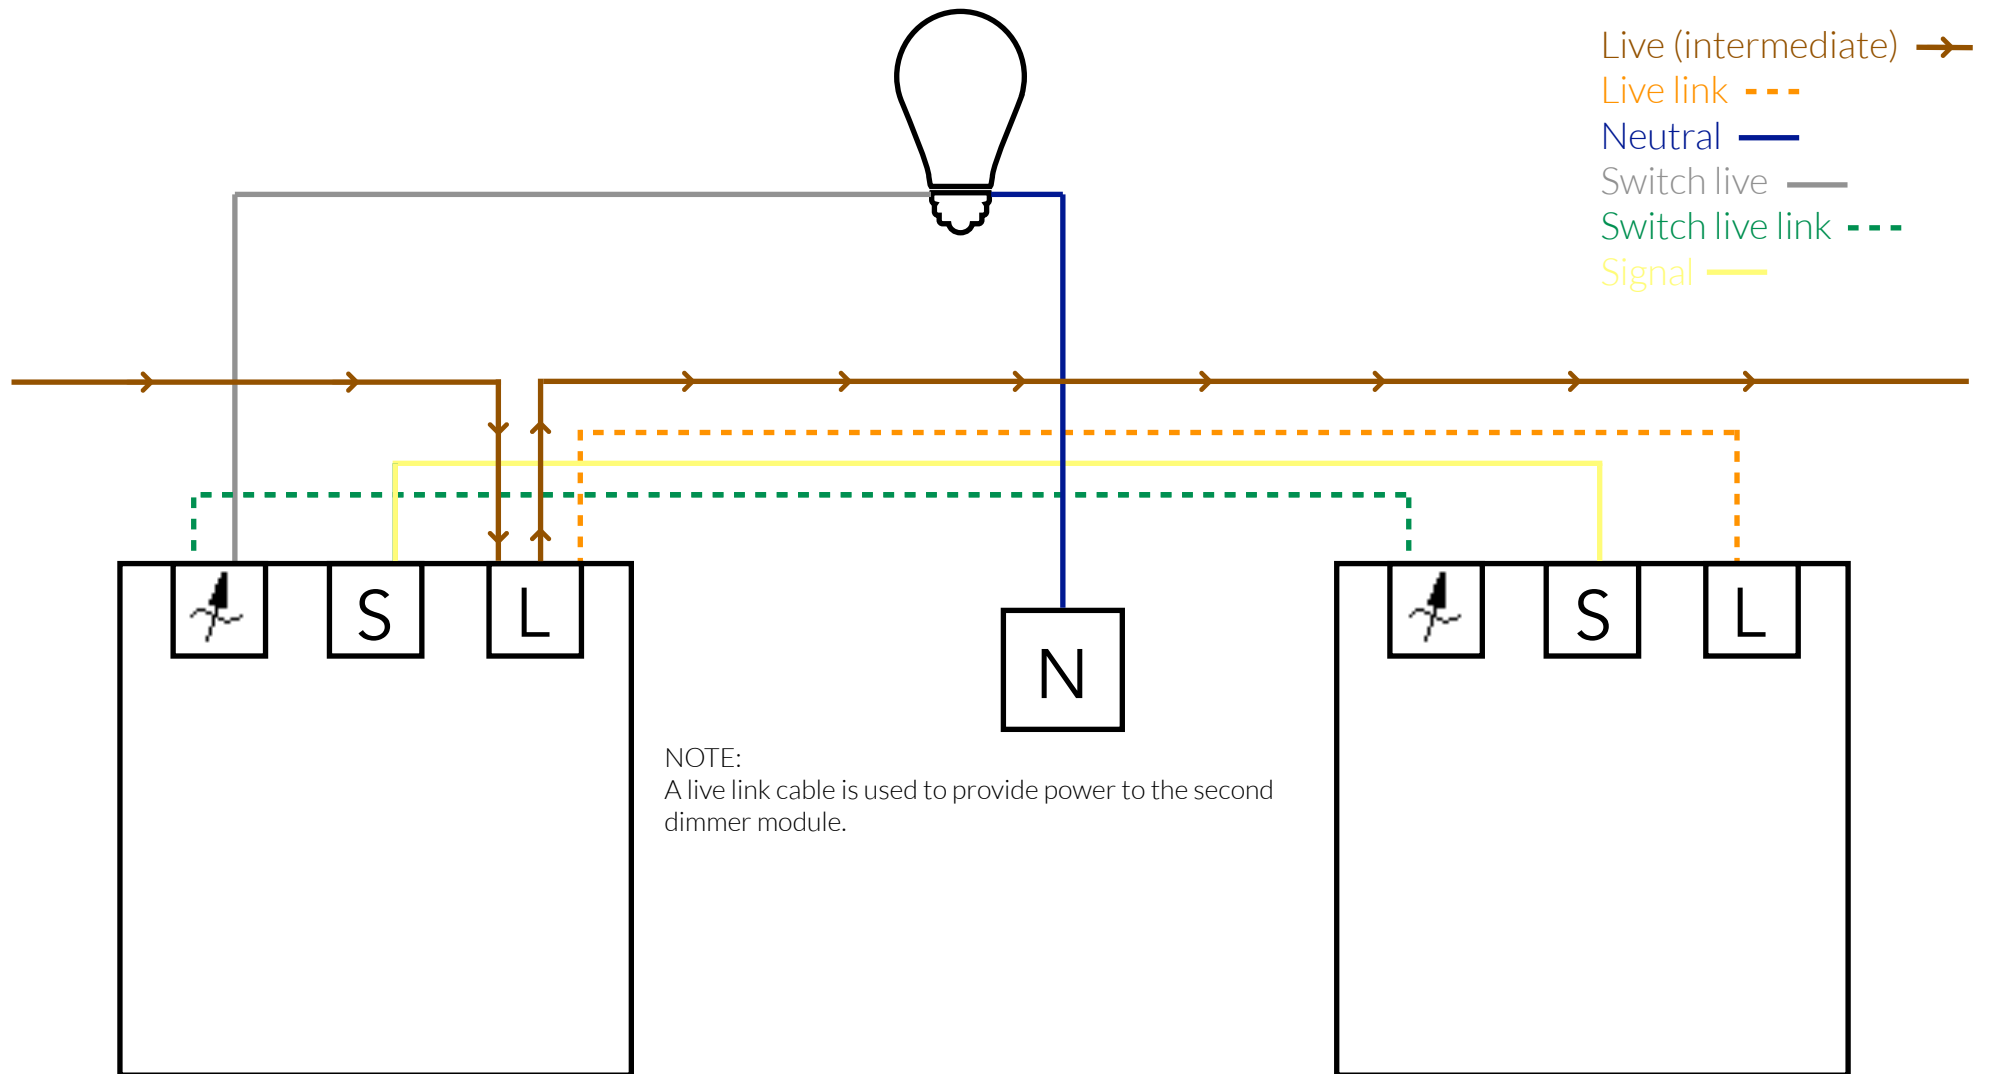

**IMPORTANT:**

A switch live link cable is needed in order for each device to sense a load. If no load and live feed is present then the device will not operate. The cable colouring in this wiring diagram may not match the cable colours at your switch. If there is no power present at the secondary dimmer switch then a link between the live terminals is needed to power up the device.